

WARRANTY INFORMATION

1. EXCLUSIVE WRITTEN LIMITED WARRANTY

ALL PRODUCTS SOLD ARE WARRANTED BY THE COMPANY (4B COMPONENTS LIMITED, (4B) BRAIME ELEVATOR COMPONENTS LIMITED, AND (4B) S.E.T.E.M. Sarl HEREIN AFTER REFERRED TO AS 4B TO THE ORIGINAL PURCHASER AGAINST DEFECTS IN WORKMANSHIP OR MATERIALS UNDER NORMAL USE FOR ONE (1) YEAR AFTER DATE OF PURCHASE FROM 4B. ANY PRODUCT DETERMINED BY 4B AT ITS SOLE DISCRETION TO BE DEFECTIVE IN MATERIAL OR WORKMANSHIP AND RETURNED TO A 4B BRANCH OR AUTHORIZED SERVICE LOCATION, AS 4B DESIGNATES, SHIPPING COSTS PREPAID, WILL BE, AS THE EXCLUSIVE REMEDY, REPAIRED OR REPLACED AT 4B'S OPTION.

2. DISCLAIMER OF IMPLIED WARRANTY

NO WARRANTY OR AFFIRMATION OF FACT, EXPRESSED OR IMPLIED, OTHER THAN AS SET FORTH IN THE EXCLUSIVE WRITTEN LIMITED WARRANTY STATEMENT ABOVE IS MADE OR AUTHORIZED BY 4B. 4B SPECIFICALLY DISCLAIMS ANY LIABILITY FOR PRODUCT DEFECT CLAIMS THAT ARE DUE TO PRODUCT MISUSE, ABUSE OR MISAPPLICATIONS, AS AUTHORIZED BY LAW, 4B SPECIFICALLY DISCLAIMS ALL WARRANTIES THAT THE PRODUCT IS FIT OR MERCHANTABLE FOR A PARTICULAR PURPOSE.

3. NO WARRANTY "BY SAMPLE OR EXAMPLE"

ALTHOUGH 4B HAS USED REASONABLE EFFORTS TO ACCURATELY ILLUSTRATE AND DESCRIBE THE PRODUCTS IN ITS CATALOGS, LITERATURE, AND WEBSITES, SUCH ILLUSTRATIONS AND DESCRIPTIONS ARE FOR THE SOLE PURPOSE OF PRODUCT IDENTIFICATION AND DO NOT EXPRESS OR IMPLY A WARRANTY AFFIRMATION OF FACT, OF ANY KIND OR A WARRANTY OR AFFIRMATION OF FACT THAT THE PRODUCTS WILL CONFORM TO THEIR RESPECTIVE ILLUSTRATIONS OR DESCRIPTIONS. 4B EXPRESSLY DISCLAIMS ANY WARRANTY OR AFFIRMATION OF FACT, EXPRESSED OR IMPLIED, OTHER THAN AS SET FORTH IN THE EXCLUSIVE WRITTEN LIMITED WARRANTY STATEMENT ABOVE, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

4. LIMITATION OF DAMAGES

ANY LIABILITY FOR CONSEQUENTIAL, INCIDENTAL, SPECIAL, EXEMPLARY, OR PUNITIVE DAMAGES, OR FOR LOSS OF PROFIT WHETHER DIRECT OR INDIRECT, IS EXPRESSLY DISCLAIMED.



4B COMPONENTS
625 Erie Avenue
Morton, Illinois 61550
USA
Tel: 309 -698 -5611
Fax: 309-698-5615
Web: www.go4b.com

4B BRAIME ELEVATOR
COMPONENTS
Hunslet Road
Leeds, LS10 1JZ
England
Tel: +44 (0) 113 246 1800
Fax: +44 (0) 113 243 5021
Web: www.go4b.com

4B SETEM
9 Route de Corbie
80800 Lamotte Warfusée
France
Tel: +33 (0) 3 22 42 32 26
Fax: +33 (0) 3 22 42 37 33
Web: www.go4b.com



WHIRLIGIG® UNIVERSAL SHAFT SENSOR MOUNT



Whirligig® Shown with M300 Slipswitch
(All Sensors Sold Separately)



U.S. Patent #6,109,120

INSTALLATION INSTRUCTIONS

OPERATION MANUAL

WHIRLIGIG - PART NO's. WG1-4B-1, WG1-4B-2, WG1-4B-4, WG1-4B-8

www.go4b.com

Dear 4B Customer:

Congratulations on your purchase. 4B appreciates your business and is pleased you have chosen our products to meet your needs.

Please read in its entirety and understand the literature accompanying the product before you place the product into service. Please read the safety precautions carefully before operating the product. With each product you purchase from 4B, there are some basic but important safety considerations you must follow to be sure your purchase is permitted to perform its design function and operate properly and safely, giving you many years of reliable service. Please read and understand the Customer Safety Responsibilities listed below. Failure to follow this safety directive and the Operation Manuals and other material furnished or referenced, may result in serious injury or death.

SAFETY NOTICE TO OUR CUSTOMERS

- A. In order to maximize efficiency and safety, selecting the right equipment for each operation is vital. The proper installation of the equipment, and regular maintenance and inspection is equally important in continuing the proper operation and safety of the product. The proper installation and maintenance of all our products is the responsibility of the user unless you have asked 4B to perform these tasks.
- B. All installation and wiring must be in accordance with Local and National Electrical Codes and other standards applicable to your industry. (Please see the article "Hazard Monitoring Equipment Selection, Installation and Maintenance" at www.go4b.com.) The installation of the wiring should be undertaken by an experienced and qualified professional electrician. Failure to correctly wire any product and/or machinery can result in the product or machine failing to operate as intended, and can defeat its design function.
- C. Periodic inspection by a qualified person will help assure your 4B product is performing properly. 4B recommends a documented inspection at least annually and more frequently under high use conditions.
- D. Please see the last page of this manual for all warranty information regarding this product.

CUSTOMER SAFETY RESPONSIBILITIES

1. READ ALL LITERATURE PROVIDED WITH YOUR PRODUCT

Please read all user, instruction and safety manuals to ensure that you understand your product operation and are able to safely and effectively use this product.

2. YOU BEST UNDERSTAND YOUR NEEDS

Every customer and operation is unique, and only you best know the specific needs and capabilities of your operation. Please call the 24-hour hotline at 309-698-5611 for assistance with any questions about the performance of products purchased from 4B. 4B is happy to discuss product performance with you at any time.

PART NUMBERS / ACCESSORIES

WG1-4B-1	Whirligig® with 1 Pulse / Target
WG1-4B-2	Whirligig® with 2 Pulse / Target
WG1-4B-4	Whirligig® with 4 Pulse / Target (Standard Version)
WG1-4B-8	Whirligig® with 8 Pulse / Target
WGB1830	18 / 30 mm Stainless Steel Bracket (Supplied)
MAG2000	Mag-Con™ Magnetic Connector (Optional)
SM1	SpeedMaster™ Speed Switch Calibration and Testing Device

Mag-Con™ Magnetic Connector

This device screws onto the Whirligig® and magnetically couples to the shaft being monitored, simplifying installation.

Material - Stainless Steel
 Holding Force - Over 150 lbs.
 Maximum Speed - 300 RPM



U.S. Patent #6,964,209

4B COMPATIBLE SENSORS

M8001V10C	M800 Elite Speed Switch
M3001V10F	M300 Slipswitch (2 Wire)
M3005V10CA	M300 Slipswitch (5 Wire)
M1001V10F	M100 Stopswitch
P8002V10FC	P800 ProxSwitch
P8001V34FC	P800 ProxSwitch (NPN/PNP)
P3002V10AI	P300 ProxSwitch
P300V34AI	P300 ProxSwitch (NPN/PNP)
P1002V10A	P100 ProxSwitch
P100V34A	P100 ProxSwitch (NPN/PNP)

For more information on Whirligig® accessories and compatible sensors, visit www.go4b.com


WARNING

- Rotating machinery can cause serious injury or death.
- Always lockout and tagout the machine prior to installation.

INSTALLATION

Do **NOT** remove the Whirligig target guard cover. The rotating components under the cover could cause serious injury.

1. There are two options to attach the Whirligig® to the machine's shaft:
Option 1 - Use Mag-Con™ magnetic connector. Thread the Mag-Con™ onto the Whirligig® using a suitable thread locking adhesive (Loctite or similar) and attach the unit onto the machine shaft.
Option 2 - Drill and tap the center of the machine shaft for 1/2" UNC thread, ensure that the shaft is tapped 1" deep. Thread the Whirligig® onto the machine shaft with a 5/8" open ended wrench using suitable thread locking adhesive (Loctite or similar).
2. Fix the white flexible strap to the bottom of the Whirligig® base plate using the supplied screws.
3. Install the sensor to the base plate, leave a 2 mm (approximate) gap between the sensor face and the target guard cover. Two sets of pre-drilled holes are provided for DIN style rectangular sensors. For 18 or 30 mm cylindrical sensors, use the supplied universal stainless steel bracket and screws.
4. Wire the sensor in accordance with the manufacturer's instructions while observing all relevant electrical and OSHA regulations.
5. Fix the white flexible strap to the static structure (if required).

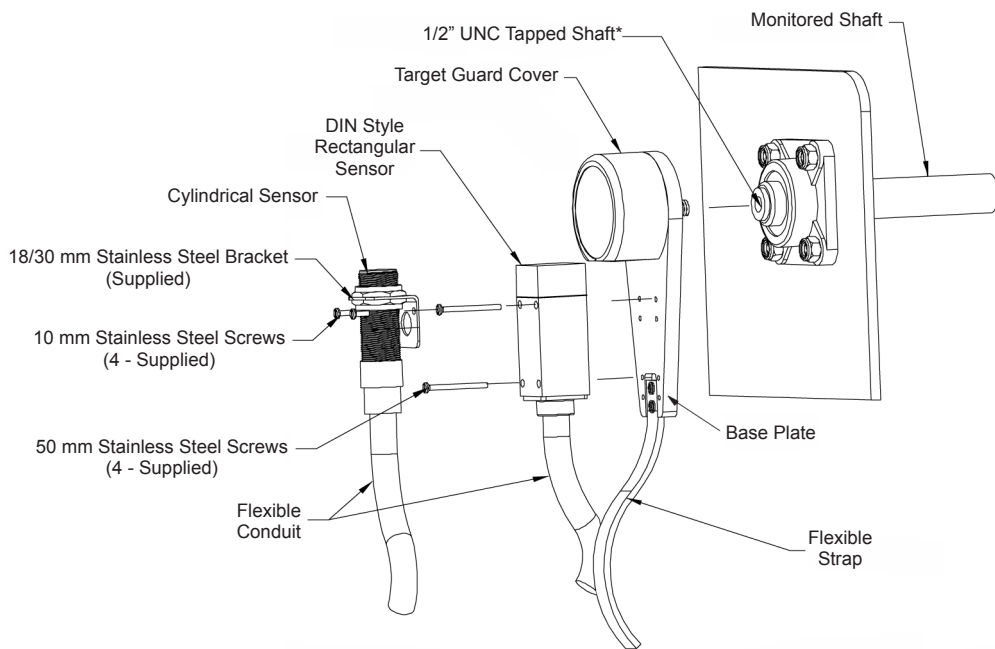

* NOTE - 1/2" UNC Tapped Shaft Not Required If Using Mag-Con™ Magnetic Connector

3. SELECT A QUALIFIED AND COMPETENT INSTALLER

Correct installation of the product is important for safety and performance. If you have not asked 4B to perform the installation of the unit on your behalf, it is critical for the safety of your operation and those who may perform work on your operation that you select a qualified and competent electrical installer to undertake the installation. The product must be installed properly to perform its designed functions. The installer should be qualified, trained, and competent to perform the installation in accordance with Local and National Electrical Codes, all relevant OSHA Regulations, as well as any of your own standards and preventive maintenance requirements, and other product installation information supplied with the product. You should be prepared to provide the installer with all necessary installation information to assist in the installation.

4. ESTABLISH AND FOLLOW A REGULAR MAINTENANCE AND INSPECTION SCHEDULE FOR YOUR 4B PRODUCTS

You should develop a proper maintenance and inspection program to confirm that your system is in good working order at all times. You will be in the best position to determine the appropriate frequency for inspection. Many different factors known to the user will assist you in deciding the frequency of inspection. These factors may include but are not limited to weather conditions; construction work at the facility; hours of operation; animal or insect infestation; and the real-world experience of knowing how your employees perform their jobs. The personnel or person you select to install, operate, maintain, inspect or perform any work whatsoever, should be trained and qualified to perform these important functions. Complete and accurate records of the maintenance and inspection process should be created and retained by you at all times.

5. RETAIN AND REFER TO THE OPERATION MANUAL FOR 4B'S SUGGESTED MAINTENANCE AND INSPECTION RECOMMENDATIONS

As all operations are different, please understand that your specific operation may require additional adjustments in the maintenance and inspection process essential to permit the monitoring device to perform its intended function. Retain the Operation Manual and other important maintenance and service documents provided by 4B and have them readily available for people servicing your 4B equipment. Should you have any questions, please call the free 24-hour hotline number (309-698-5611).


6. SERVICE REQUEST

If you have questions or comments about the operation of your unit or require the unit to be serviced please contact the 4B location who supplied the product or send your request via fax (309-698-5615) or call us via our 24-hour hotline number in the USA (309-698-5611). Please have available product part numbers, serial numbers, and approximate date of installation. In order to assist you, after the product has been placed into service, complete the online product registration section which is accessed via our website www.go4b.com.

INTRODUCTION

The Whirligig is a fully guarded target for easy mounting of motion sensors. It is a target, bracket and guard suitable for all industry standard cylindrical or DIN style inductive sensors including 4B's M100, M300, and M800 Elite speed switches or P100, P300 and P800 proximity sensors.



Sensors (sold separately) bolt to the Whirligig and the complete assembly either bolts to the machines shaft through a 1/2" UNC tapped hole, or is connected magnetically using 4B's patented Mag-Con™ adaptor. Shaft or machine vibration does not affect the performance of the sensor, as the whole assembly moves with the shaft. With the Whirligig, installation of speed sensors is now simple, safe and reliable.

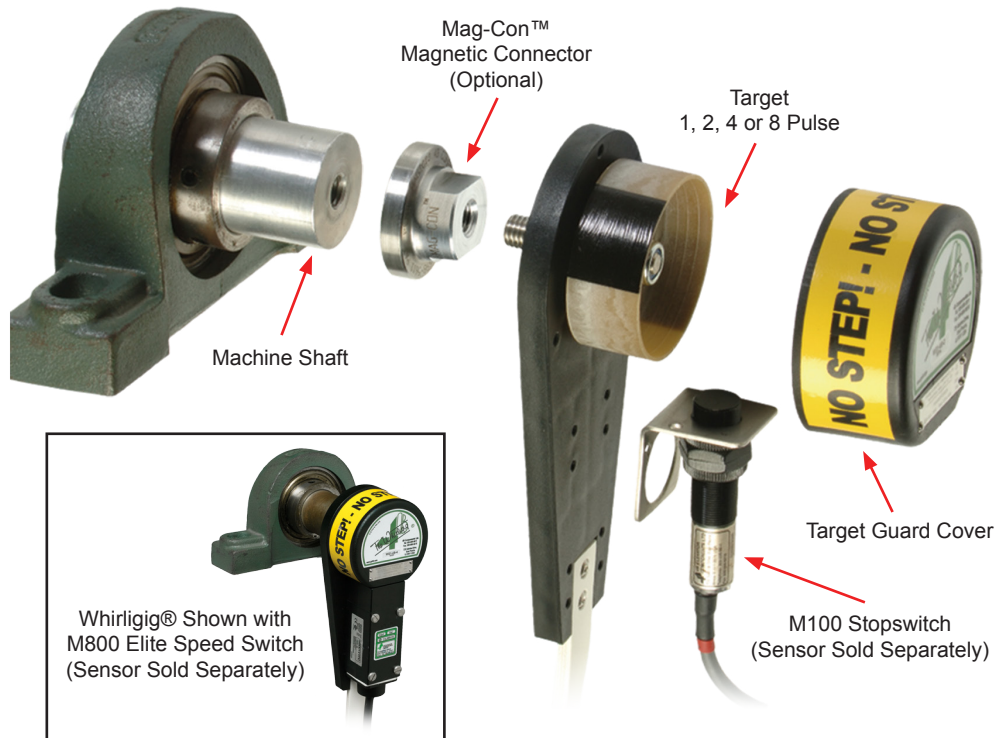

SPECIFICATIONS

Shaft Material -	Stainless Steel
Body Material -	Polypropylene
Bearing -	Sealed Stainless Steel
Thread Size -	1/2" UNC
Hex Wrench Size -	5/8"
Maximum Speed -	1,500 RPM
Pulses / Targets -	1, 2, 4 or 8 (Must Specify)Text

DIMENSIONS

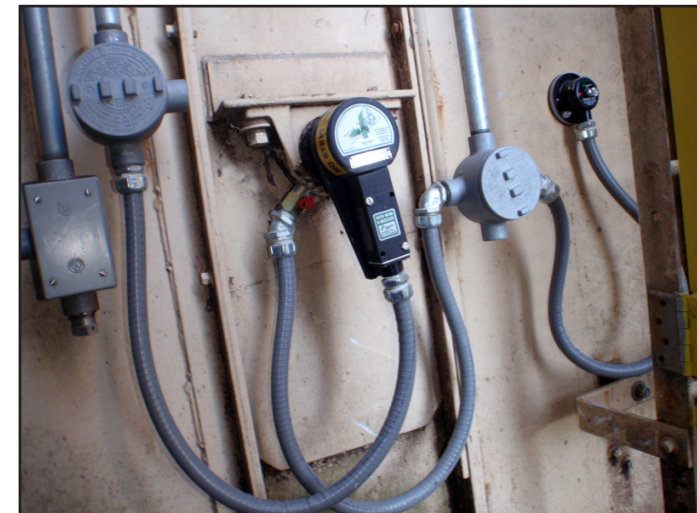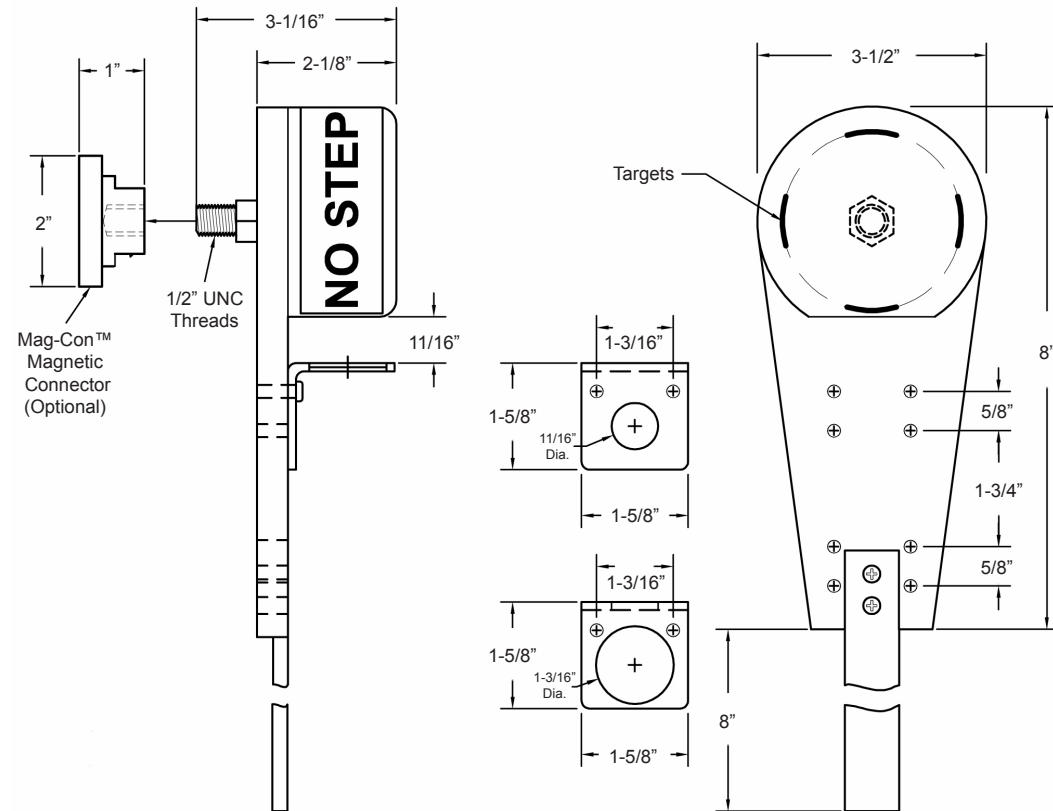

Whirligig® on Bucket Elevator with M800 Elite Speed Switch